

SP1 Stereo Vision System

User Manual

(v1.1) September 21, 2015



Dr. Konstantin Schauwecker
Nerian Vision Technologies
Gotenstr. 9
70771 Leinfelden-Echterdingen
Germany

Email: service@nerian.com

Contents

1	Functionality Overview	3
2	Included Parts	3
3	General Specifications	3
3.1	Hardware Details	3
3.2	Stereo Matching	3
3.3	Image Rectification	4
4	Mechanical Specifications	4
4.1	Dimensions	4
4.2	Mounting	4
5	Physical Interfaces	6
6	Hardware Setup	7
6.1	Connecting the SP1	7
6.2	Supported Cameras	7
6.3	Camera Alignment	8
6.4	External Trigger	8
7	Processing Results	9
7.1	Rectified Images	9
7.2	Disparity Maps	9
8	Configuration	11
8.1	System Status	11
8.2	Preview	12
8.3	Processing Settings	14
8.4	Cameras	15
8.4.1	Camera Selection	15
8.4.2	Camera Settings	16
8.4.3	Recommended Settings for Point Grey Cameras	17
8.4.4	Recommended Settings for IDS Cameras	17
8.5	Trigger	18
8.6	Camera Calibration	18
8.6.1	Calibration Board	18
8.6.2	Recording Calibration Frames	19
8.6.3	Performing Calibration	21
8.7	Reviewing Calibration Results	21
8.8	Network Settings	24
8.9	Maintenance	24

9	API Usage Information	25
9.1	General Information	25
9.2	ImageTransfer Example	26
9.3	AsyncTransfer Example	28
9.4	3D Reconstruction	29
10	SpCom Sample Application	29
11	Support	31
12	Warranty Information	31
13	Open Source Information	32

1 Functionality Overview

The SP1 stereo vision system is a stand-alone processing system for performing stereo matching in real time. It is connected to two industrial USB cameras that provide input image data. The SP1 correlates the images of both cameras and produces a disparity map, which is transmitted through gigabit ethernet. The disparity map describes a mapping of image points from the left camera image to corresponding image points in the right camera image. With this information it is possible to reconstruct the 3D location of the corresponding scene points.

2 Included Parts

When ordering a new SP1 from Nerian Vision Technologies, the package should include the following parts:

- SP1 stereo vision system
- 5 V DC power adapter
- 4 stickable rubber pads (not included for surface mountable version)
- Manual

If any of the listed parts is missing in your delivery, please contact our support personnel.

3 General Specifications

3.1 Hardware Details

Power consumption:	< 4 W
Power supply:	5 V DC
Dimensions:	105 x 76 x 36 mm
Weight:	0.25 kg
I/O:	USB 2.0 host, gigabit ethernet, 2x trigger out
Max. USB power:	500 mA

3.2 Stereo Matching

Stereo algorithm:	Semi-Global Matching (SGM)
Disparity range:	112 pixels
Processing rate:	30 Hz
Sub-pixel resolution:	4 bits (1/16 pixel)
Supported image size:	640 × 480 pixels
Post-processing:	Consistency check, uniqueness check, gap interpolation, noise reduction

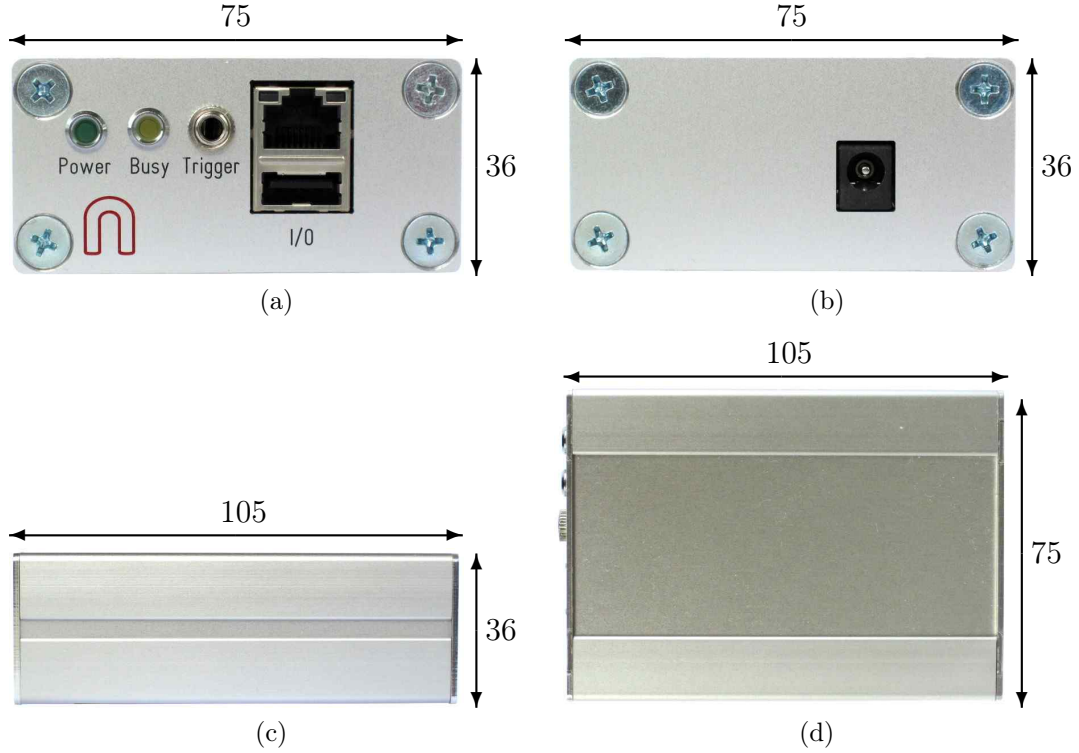


Figure 1: (a) Front, (b) rear, (c) side and (d) top view of SP1 with dimensions in millimeters.

3.3 Image Rectification

Horizontal displacement: -31 to $+31$ pixels
Vertical displacement: -31 to $+31$ pixels
Interpolation: Bilinear

4 Mechanical Specifications

4.1 Dimensions

Figures 1a to 1d show the SP1 as seen from front, rear, side and top. The provided dimensions are measured in millimeters.

4.2 Mounting

The SP1 is optionally available in a surface mountable version. This version features a mounting plate that is attached to the bottom side of the housing. The four through holes on the mounting plate can be used for mounting the SP1 onto a flat surface. The dimensions of this mounting plate are shown in millimeters in Figure 3. The through holes are compatible to screws with an M4 ISO metric thread.



Figure 2: SP1 with attached mounting plate.

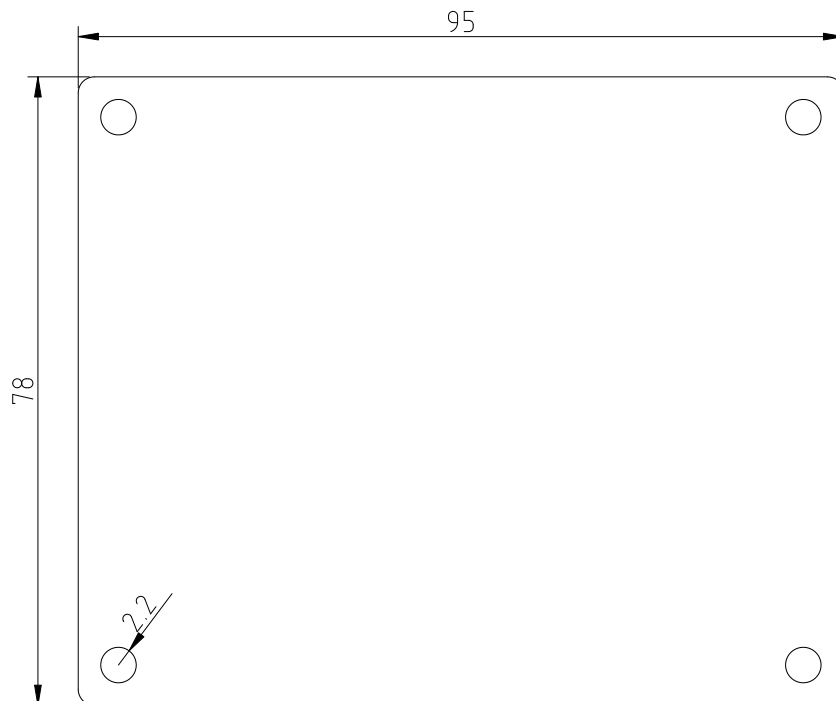


Figure 3: Mounting plate dimensions in millimeters.

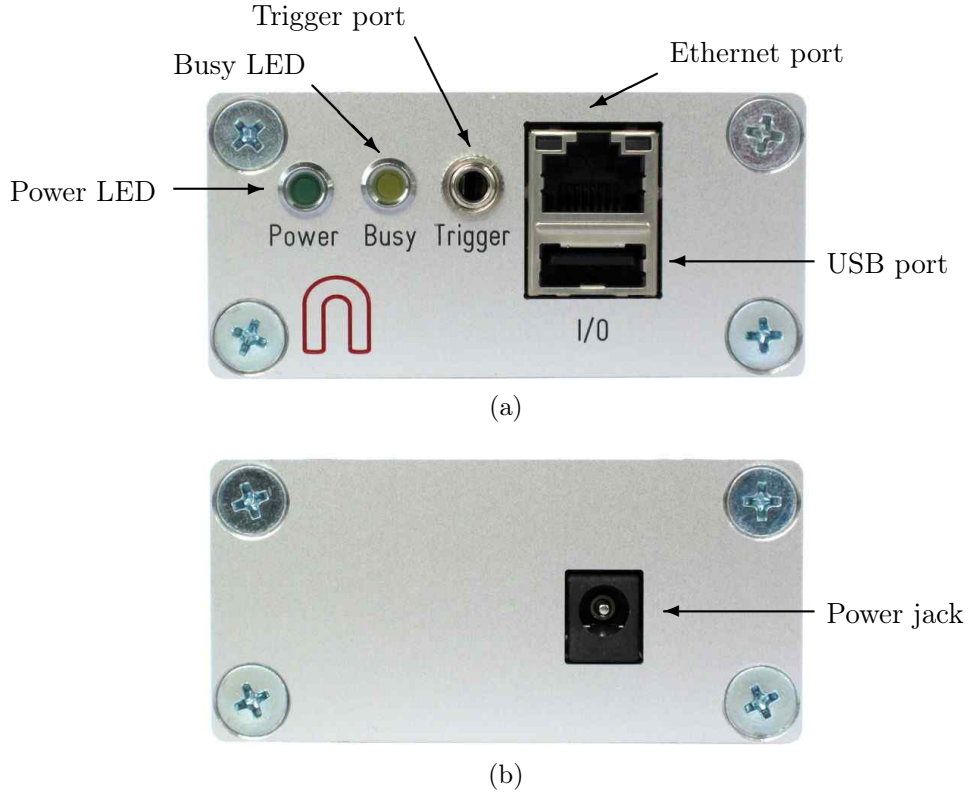


Figure 4: Interfaces on (a) front and (b) rear housing side.

5 Physical Interfaces

Figures 4a and 4b show the interfaces on the SP1's front and backside. The power jack is located on the backside, and it needs to be connected to the supplied power adapter or an equivalent model. When using an alternative power supply, please make sure that the voltage is set no higher than 5 V DC, as otherwise the device might be damaged.

The front side features the following interfaces:

Power LED: Indicates that the device is powered up and running.

Busy LED: Indicates that the device is currently processing incoming input data.

Trigger port: Port for providing two camera trigger signals. See Section 6.4.

Ethernet port: Port for connecting to a client computer. It is used for delivering processing results, and for providing access to the configuration interface.

USB port: Port for connecting the desired USB cameras through a USB hub.

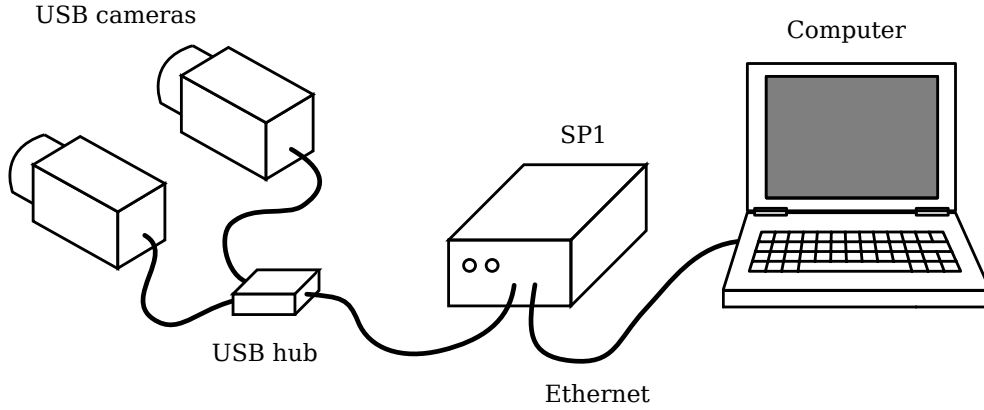


Figure 5: Example setup for cameras, SP1 and client computer.

6 Hardware Setup

6.1 Connecting the SP1

Figure 5 shows a basic system setup for stereo vision. A client computer that receives the processing results is connected to the SP1's ethernet port. Alternatively it is possible to connect the SP1 to a switched network. However, you will have to ensure that the network is capable of handling the high bandwidth data that is transmitted by the device. The network must support data rates of at least 25 MB/s.

The cameras are connected to the SP1's USB port. As the SP1 only features one USB port, a USB hub is mandatory for making this connection. **Please note that the USB hub usually has to be powered externally, to meet the power consumption of the cameras.**

6.2 Supported Cameras

The SP1 supports the following camera models:

- Point Grey Blackfly; model BFLY-U3-03S2M-CS
- Point Grey Blackfly; model BFLY-U3-13S2M-CS
- Point Grey Chameleon3; model CM3-U3-13S2M-CS
- Point Grey Chameleon3; model CM3-U3-13Y3M-CS
- Point Grey Flea3; model FL3-U3-13E4M-C
- Point Grey Flea3; model FL3-U3-13Y3M-C
- Point Grey Grasshopper3; model GS3-U3-14S5M-C
- Point Grey Grasshopper3; model GS3-U3-15S5M-C



Figure 6: Example for standard epipolar geometry.

- IDS uEye ML; model UI-3240ML-M-GL
- IDS uEye CP; model UI-3140CP-M-GL Rev.2
- IDS uEye CP; model UI-3240CP-M-GL

All cameras must have a gray scale sensor.

6.3 Camera Alignment

Both cameras have to be mounted on a plane with a displacement that is perpendicular to the cameras' optical axes. Furthermore, both cameras must be equipped with lenses that have an identical focal length. This arrangement is known as the *standard epipolar geometry*. An example for such a camera mounting is shown in Figure 6.

The distance between both cameras is referred to as *baseline distance*. Using a large baseline distances improves the depth resolution at high distances. A small baseline distances, on the other hand, allows for the observation of very close objects. The baseline distance should be adjusted in conjunction with the lenses' focal length. An online tool for computing desirable combinations of baseline distance and focal length can be found on the Nerian Vision Technologies website¹.

6.4 External Trigger

For stereo matching it is important that both cameras are synchronized, meaning that both cameras record an image at exactly the same point of time. Many industrial cameras already feature the ability to synchronize themselves, by having one camera produce a trigger signal for the respective other camera.

As an alternative, the SP1 can produce up to two trigger signals. The signals are provided through the trigger port, which can receive a standard 3.5 mm phone connector. The pin assignment for this connector is shown in Figure 7.

The peak voltage of both trigger signals is at +3.3 V. To protect the trigger port from short circuits, each signal line is connected through a 220 Ω series

¹<http://nerian.com/products/sp1-stereo-vision/calculator/>

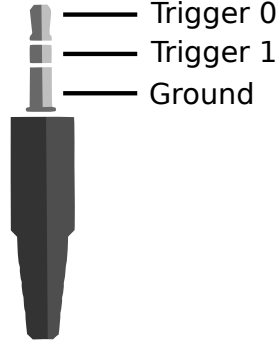


Figure 7: Pin assignement for trigger output.

resistor. Trigger frequency and pulse width can be configured through the web interface (see Section 8.5).

7 Processing Results

7.1 Rectified Images

Even when carefully aligning both cameras, you are unlikely to receive images that match the expected result form an ideal standard epipolar geometry. The images will be affected by various distortions that result from errors in the cameras' optics and mounting. Therefore, the first processing step that is performed is an image undistortion operation, which is known as *image rectification*.

Image rectification requires precise knowledge of the cameras' projective parameters. These can be determined through camera calibration. Please refer to Section 8.6 for a detailed explanation of the camera calibration process.

Figure 8a shows an example camera image, where the camera was pointed towards a calibration board. The edges of the board appear slightly bent, due to radial distortions in the camera's optics. Figure 8b shows the same image after image rectification. This time, all edges of the calibration board are perfectly straight.

When performing stereo matching, the SP1 additionally outputs the rectified left camera image. This allows for a mapping of features in the visible image to structures in the determined scene depth and vice versa.

7.2 Disparity Maps

The stereo matching results are delivered in the form of a *disparity map* for the left camera image. The disparity map assigns each pixel in the left camera image to a corresponding pixel in the right camera image. Because both images were previously rectified to match an ideal standard epipolar geometry,

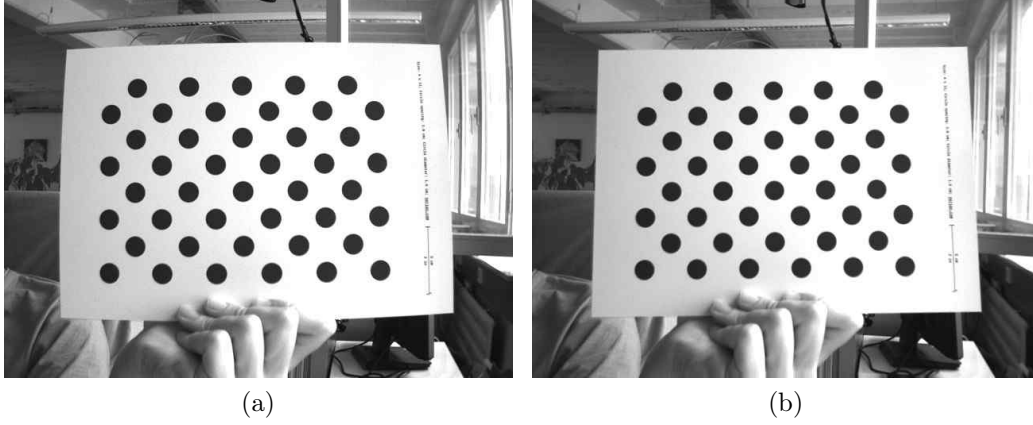


Figure 8: Example for (a) unrectified and (b) rectified camera image.

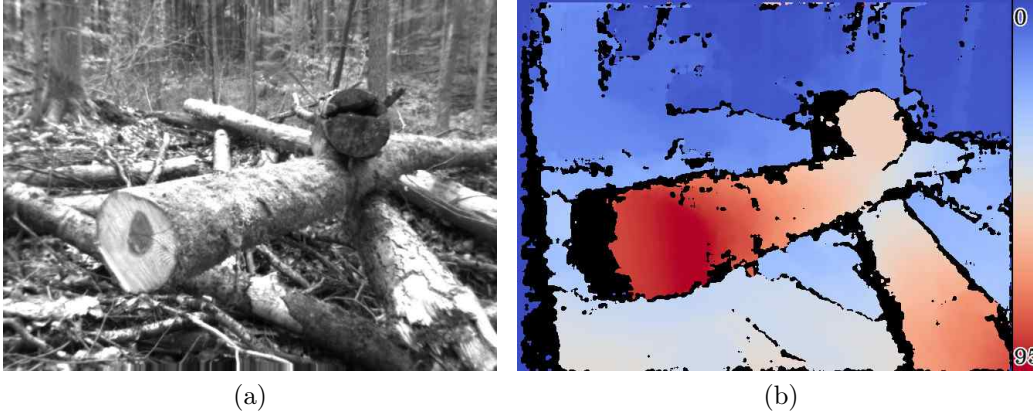


Figure 9: Example for (a) left camera image and corresponding disparity map.

corresponding pixels should only differ in their horizontal coordinates. The disparity map thus only has to encode the *horizontal coordinate difference*.

An example for a left camera image and the corresponding disparity map are shown in Figure 9a and 9b. Here the disparity map has been color coded, with blue hues reflecting small disparities, and red hues reflecting large disparities. The disparity is proportional to the inverse depth of the corresponding scene point. It is thus possible to transform the disparity map into a set of 3D points. This can be done at a correct metric scale if the cameras have been calibrated.

The transformation of a disparity map to a set of 3D points requires knowledge of the disparity-to-depth mapping matrix Q , which is computed during camera calibration and can be obtained from the *review calibration* page of the SP1's web interface (see Section 8.7). The 3D location $(x \ y \ z)^T$ of a point with image coordinates (u, v) and disparity d can be reconstructed as follows:

$$\begin{pmatrix} x \\ y \\ z \end{pmatrix} = \frac{1}{w} \cdot \begin{pmatrix} x' \\ y' \\ z' \end{pmatrix}, \text{ with } \begin{pmatrix} x' \\ y' \\ z' \\ w \end{pmatrix} = Q \cdot \begin{pmatrix} u \\ v \\ d \\ 1 \end{pmatrix}$$

An efficient implementation of this transformation is provided with the available API (see Section 9.4).

The SP1 computes disparity maps with a resolution that is below one pixel. Disparity maps have a bit-depth of 12 bits, with the lower 4 bits of each value representing the fractional disparity component. It is thus necessary to divide each value in the disparity map by 16 in order to receive the correct disparity magnitude.

The SP1 applies several post-processing techniques in order to improve the quality of the disparity maps. Some of these methods detect erroneous disparities and mark them as invalid. Invalid disparities are set to `0xFF`, which is the highest value that can be stored in a 12-bit disparity map. In Figure 9b invalid disparities have been depicted as black.

8 Configuration

The SP1 is configured through a web interface, which can be reached by entering the IP address of the SP1 in your browser. The default address is `http://192.168.10.10`. Please configure the IP address and subnet mask of your computer appropriately, such that this interface can be reached. If the SP1 has just been plugged in, it will take several seconds before the web interface is accessible.

For using the web interface you require a browser with support for HTML 5. Please use a recent version of one of the major browsers, such as Internet Explorer, Firefox, Chrome or Safari.

8.1 System Status

The first page that you will see when opening the web interface, is the *system status* page that is shown in Figure 10. On this page you can find the following information:

Processing status: Indicates whether the image processing sub-system has been started. If this is not the case then there might be a problem accessing the cameras, or another system error might have occurred. Please consult the system logs in this case. The image processing sub-system will be started immediately once the cause of error has been removed (such as connecting the cameras).

SOC temperature: The temperature of the central System-on-Chip (SoC) that performs all processing tasks. The maximum allowed temperature

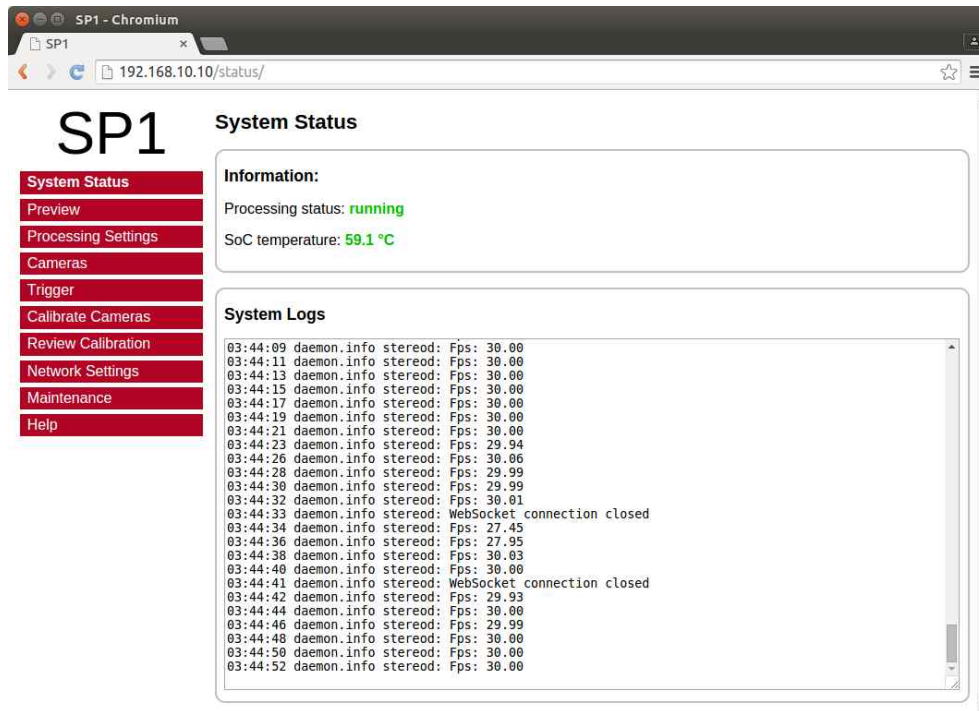


Figure 10: Screenshot of configuration status page.

is at 70 °C. A green-orange-red color-coding is applied to signal good, alarming and critical temperatures.

System logs: List of system log messages sorted by time. In regular operation you will find information on the current system performance. In case of errors, the system logs will contain a corresponding error message.

8.2 Preview

The *preview* page, which is shown in Figure 11, provides a live preview of the currently computed disparity map. Please make sure that your network connection supports the high bandwidth that is required for streaming video data (see Section 6.1). For using the preview page you require a direct connection to the SP1. An in-between proxy server or a router that performs network address translation (NAT) cannot be used.

When opening the preview page, the SP1 stops transferring image data to any other host. The transfer is continued as soon as the browser window is closed, the user presses the pause button below the preview area, or if the user navigates to a different page. Only one open instance of the preview page, or any other page that is streaming video data to the browser, is allowed at a time. If attempted to open more than once, only one instance will receive data.

The preview that is displayed in the browser does not reflect the full qual-

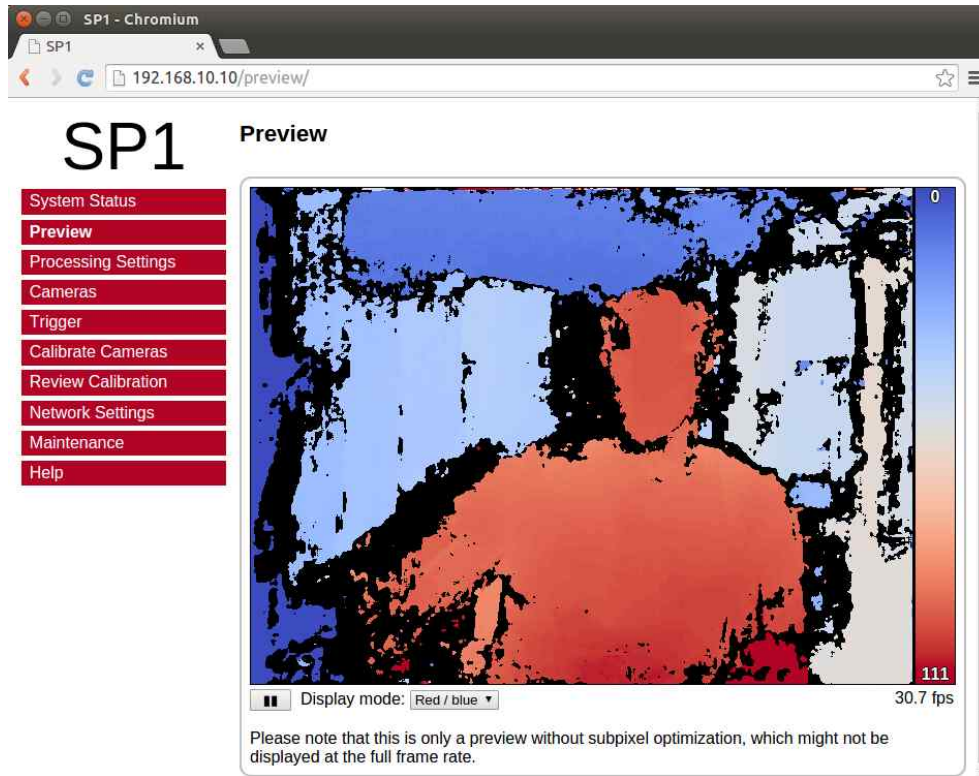


Figure 11: Screenshot of configuration preview page.

ity of the computed disparity map. In particular, sub-pixel accuracy is not available, and your browser might not be able to display the disparity map at the full camera frame rate. To receive a full-quality preview, please use the SpCom sample application, which is described in Section 10.

Different color-coding schemes can be selected through the drop-down list below the preview area. A color scale is shown to the right, which provides information on the mapping between colors and disparity values. The possible color schemes are:

Red / blue: A gradient from red to blue, with red hues corresponding to high disparities and blue hues corresponding to low disparities. Invalid disparities are depicted in black.

Rainbow: A rainbow color scheme with low wavelengths corresponding to high disparities and high wavelengths corresponding to low disparities. Invalid disparities are depicted in grey.

Raw data: The raw disparity data without color-coding. The pixel intensity matches the integer component of the measured disparity. Invalid disparities are displayed in light gray.

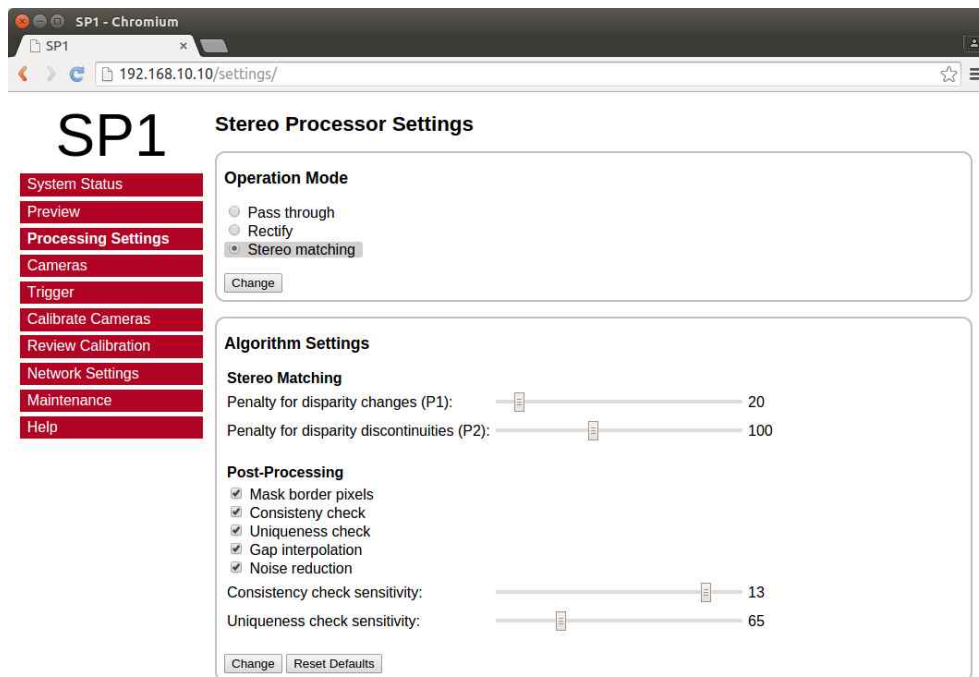


Figure 12: Screenshot of configuration page for processing settings.

8.3 Processing Settings

The major processing parameters can be changed on the *processing settings* page, which is shown in Figure 12. The most relevant option is the operation mode, which can be set to one of the following values:

Pass through: In this mode the SP1 forwards the imagery of the selected cameras without modification. This mode is intended for verifying that both cameras are functioning correctly.

Rectify: In this mode the SP1 transmits the rectified images of both cameras. This mode is intended for verifying the correctness of image rectification.

Stereo matching: In this mode the SP1 performs stereo matching. It transmits the rectified image of the left camera and the left camera disparity map.

Please note that for pass through and rectify mode, the right image pixels have to be divided by 16, in order to receive the correct intensities. This is due to the fact that the right image is always transmitted with a bit depth of 12 bits.

If the operation mode is set to stereo matching, then the behavior of the image processing algorithms can be controlled through the *algorithm settings*. These settings include the following stereo matching parameters:

Penalty for disparity changes (P1): A penalty that is applied for gradually changing disparities. A large value causes gradual disparity changes to occur less frequently, while a small value causes gradual changes to occur more frequently. This value has to be smaller than P2.

Penalty for disparity discontinuities (P2): A penalty that is applied to abruptly changing disparities. A large value causes disparity discontinuities to occur less frequently, while a small value causes discontinuities to occur more frequently. This value has to be greater than P1.

The SP1 implements several methods for post-processing of the computed disparity map. Each post-processing method can be activated or deactivated individually. The available methods are:

Mask border pixels: If enabled, this option marks all disparities that are close to the border of the visible image area as invalid, as they have a high likelihood of being wrong. This also includes all pixels for which no actual image data is available due to the image rectification (see Section 7.1).

Consistency check: If enabled, stereo matching is performed in both matching directions, left-to-right and right-to-left. Pixels for which there is no consistent disparity are marked as invalid. The sensitivity of the consistency check can be controlled through the *consistency check sensitivity* slider.

Uniqueness check: If enabled, pixels are marked as invalid if there is no sufficiently unique solution (i.e. the cost function does not have a global minimum that is significantly lower than all other local minima). The sensitivity of the uniqueness check can be controlled through the *uniqueness check sensitivity* slider.

Gap interpolation: If enabled, then small patches of invalid disparities, which are caused by either the consistency or the uniqueness check, are filled through interpolation.

Noise reduction: If enabled, an image filter is applied to the disparity map, which reduces noise and removes outliers.

Speckle filter: Marks small isolated patches of similar disparity as invalid. Such *speckles* are often the result of erroneous matches.

8.4 Cameras

8.4.1 Camera Selection

The *cameras* page that is shown in Figure 13 allows for the selection of a desired camera pair and the adjustment of their respective parameters. All

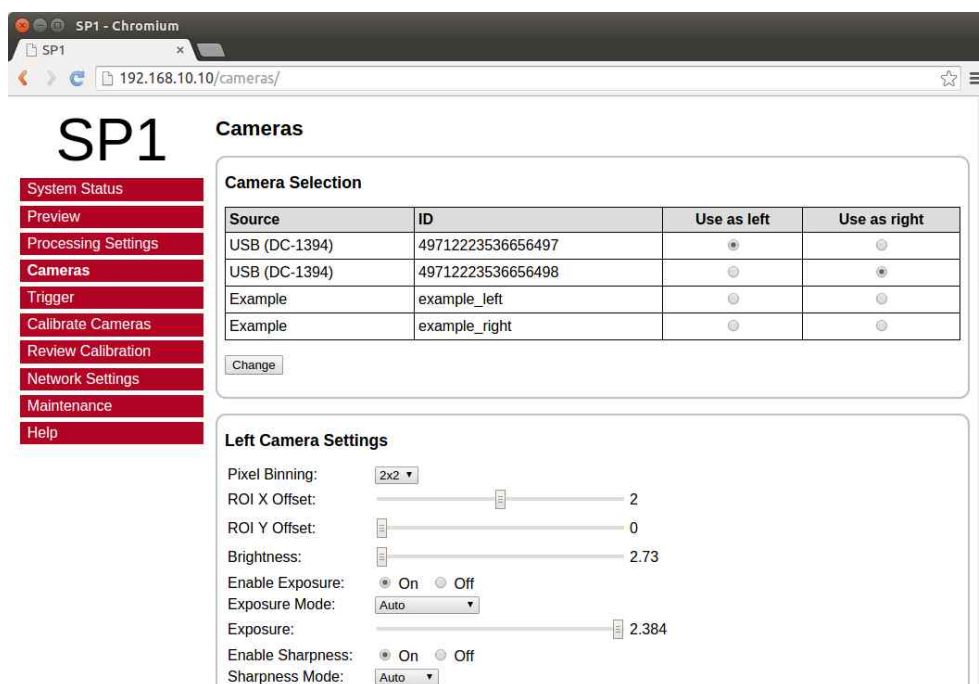


Figure 13: Screenshot of configuration page for camera settings.

detected cameras are listed in the *camera selection* list. A source is listed for each camera, which identifies the utilized camera driver. To allow for an easy evaluation, the SP1 ships with an example stereo sequence on its internal memory. This example sequence appears as a virtual left and virtual right camera.

To choose a particular camera, you have to tick either the *use as left* or *use as right* radio button, for selecting the camera as the left or right camera of the stereo pair. Please note that cameras of different sources cannot be used together. If one of the virtual example cameras is selected, the example sequence is replayed in an infinite loop. Due to speed limitations of the internal memory, the example sequence will not be played at the full frame rate during the first loop.

8.4.2 Camera Settings

After selecting a camera pair, camera specific settings can be adjusted in the *left camera settings* and *right camera settings* area. The available settings depend on your camera model. Please refer to your camera documentation for details. Some of the more advanced settings of your camera might not be available. In this case please use the software provided by the camera manufacturer to adjust the desired settings and save the new camera configuration to the cameras' internal memory.

By pressing the *reset camera defaults* button you can reset the camera's settings to the default configuration. This is usually the configuration that

has been written to the camera's internal memory through the manufacturer software. If the *reset* button is pressed, all configuration changes that have not yet been confirmed through the *change* button will be reverted.

The SP1 offers the functionality to synchronize parameters that are otherwise automatically adjusted by each camera. For example, each camera might control its shutter time through an auto shutter algorithm. The SP1 can synchronize such auto-adjusted parameters by setting the parameters of the left camera to always match the respective parameters of the right camera.

If this functionality is desired, the *mode* for the particular feature has to be set to *synchronize to left camera* in the right camera settings, and to *auto* in the left camera settings. In this case, the SP1 will query the settings of the left camera and adjust the right camera's settings accordingly.

8.4.3 Recommended Settings for Point Grey Cameras

When using Point Grey USB cameras we recommend that you use the following settings:

- Enable external trigger and select the desired trigger source.
- If the cameras are connected to the SP1's trigger port, set the trigger polarity to *active high*. Otherwise set the polarity according to your trigger source.
- Set the trigger mode to *14* (recommended) or *0*. Always use mode 14 if the internal camera frame rate is not significantly higher than the trigger frequency.
- For the left camera, set the mode of exposure, sharpness, shutter and gain to *auto*.
- For the right camera, set the mode of exposure, sharpness, shutter and gain to *synchronize to left camera*.

8.4.4 Recommended Settings for IDS Cameras

When using cameras from IDS Imaging we recommend that you use the following settings:

- If the cameras shall be triggered by the SP1 trigger output:
 - Due to voltage levels, the SP1 trigger output needs to be connected to a camera GPIO pin, rather than the trigger input.
 - The connected GPIO pin needs to be selected as trigger source.
 - The trigger mode shall be set to *hardware trigger, rising edge*.
- Set the camera frame rate to at least twice the trigger frequency.

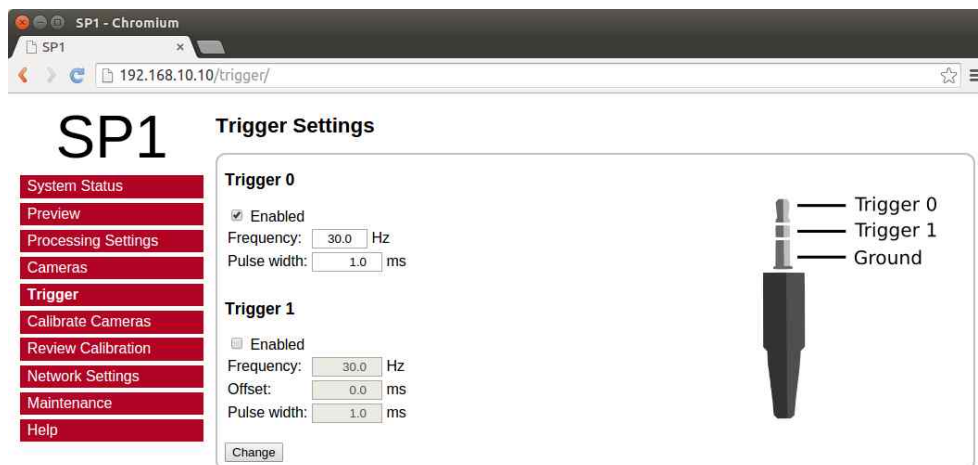


Figure 14: Screenshot of configuration page for trigger settings.

- For the left camera, set the mode of gain, exposure / shutter and black level to *auto*.
- For the right camera, set the mode of gain, exposure / shutter and black level to *synchronize to left camera*.

8.5 Trigger

The *trigger* page that is shown in Figure 14 allows for adjusting the external trigger settings. As described in Section 6.4, the SP1 features a trigger port that provides access to up to two trigger signals. The two trigger signals, *trigger 0* and *trigger 1*, can be enabled or disabled by selecting the respective check boxes.

For *trigger 0* it is possible to select a frequency between 6 and 50 Hz and an arbitrary pulse width in milliseconds. The polarity of the generated trigger signal is active high.

The signal *trigger 1* can only be enabled if *trigger 0* is also enabled. The frequency is forced to the same value as *trigger 0*. However, it is possible to specify a time offset, which is the delay from a rising edge of *trigger 0* to a rising edge of *trigger 1*. Furthermore, *trigger 1* can have a pulse width that differs from *trigger 0*.

8.6 Camera Calibration

8.6.1 Calibration Board

The *calibrate cameras* page, which is shown in Figure 15, enables the calibration of the stereo camera pair. You require a calibration board, which is a flat panel with a visible calibration pattern on one side. The pattern that is used by the

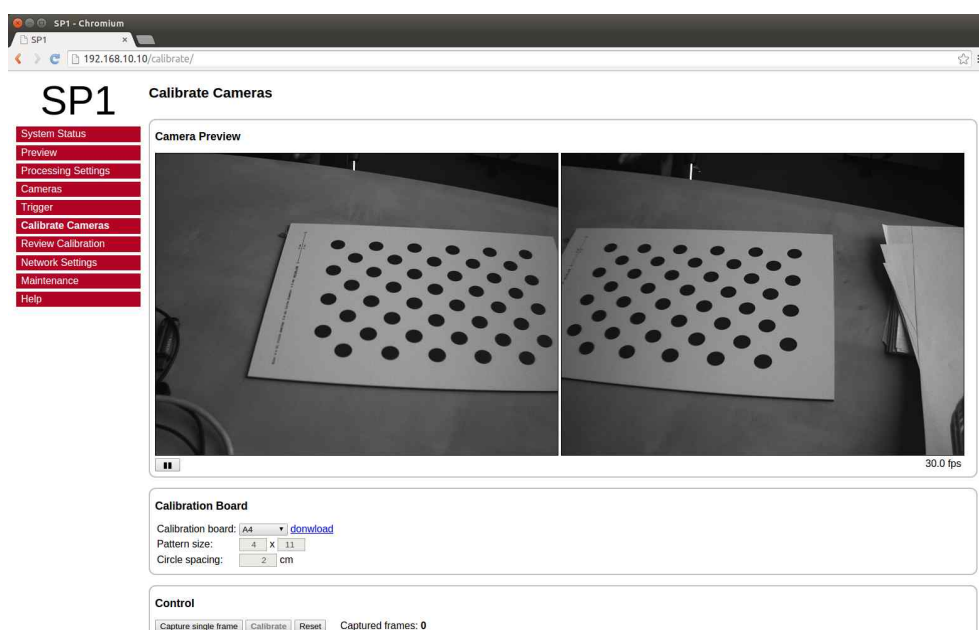


Figure 15: Screenshot of configuration page for camera calibration.

SP1 consists of an asymmetric grid of black circles on a white background, as shown in Figure 16.

The pattern can be downloaded directly from the calibration page. Simply select the desired paper size in the *calibration board* drop-down list, and click the download link. Even if you already have a calibration board, make sure to always select the correct board size before starting the calibration process. Otherwise the calibration results cannot be used for 3D reconstruction with a correct metric scale (see Section 7.2).

Should you require a calibration board with a custom size, then you can select *custom* from the *calibration board* drop-down list. This allows you to enter the calibration board details manually. The first dimension of the *pattern size* is the number of circles in one grid column. This number must be equal for all columns of the circles grid.

The number of circles per row is allowed to vary by 1 between odd and even rows. The second dimension is thus the sum of circles in two consecutive rows. All downloadable default calibration patterns have a size of 4×11 .

The final parameter that you have to enter when using a custom calibration board is the *circle spacing*. This is the distance between the centers of two neighboring circles. The distance must be equal in horizontal and vertical direction for all circles.

8.6.2 Recording Calibration Frames

Once the calibration board settings have been set, you can begin recording calibration frames. A live preview of both cameras is displayed in the *camera*

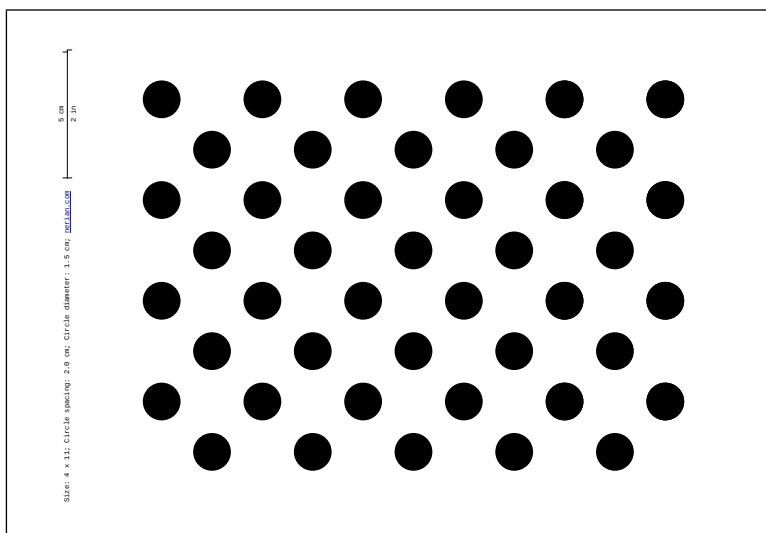


Figure 16: Calibration board used by SP1.

preview area. Make sure that the calibration board is fully visible in both camera images and then press the *capture single frame* button in the *control* section. Repeat this process several times while moving either the camera or the calibration board.

The calibration board must be recorded at several different positions and orientations. You should also vary the distance of the board to the cameras and make sure that you cover most of the cameras' field of view. When recording the calibration frames it is important that both cameras are synchronized.

The more frames you record, the more accurate the computed calibration will be. However, more frames also cause the computation of the calibration parameters to take longer. The SP1 supports the recording of up to 40 calibration frames.

The recording of calibration frames can be simplified by activating the *auto capture* mode. In this mode, a new calibration frame is recorded in fix *capture intervals*. You can enter the desired interval in the auto capture section and then press the *start auto capture* button. If desired, an audible sound can be played to signal the countdown and the recording of a new frame. Auto capture mode can be stopped by pressing the *stop auto capture* button.

A small preview of each captured calibration frame is added to the *captured frames* section. The frames are overlaid with the detected positions of the calibration board circles. You can click any of the preview images to see the calibration frame at its full resolution. An example for a calibration frame with a correctly detected calibration board is shown in Figure 17. If the calibration board was not detected correctly or if you are unhappy with the quality of a calibration frame, then you can delete it by clicking on the ×-symbol.

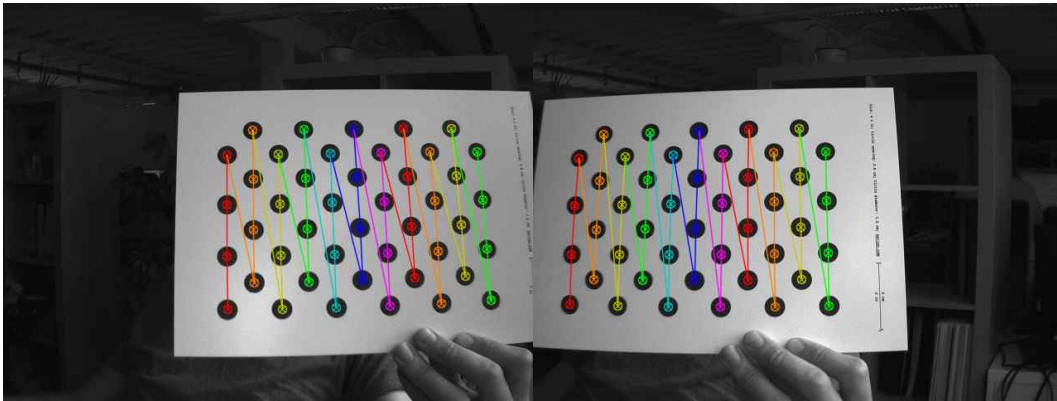


Figure 17: Example calibration frame with detected calibration board.

8.6.3 Performing Calibration

Once you have recorded a sufficient number of calibration frames, you can initiate the calibration process by pressing the *calibrate* button in the *control* section. The time required for camera calibration depends on the number of calibration frames that you have recorded. Calibration will usually take several minutes to complete. If calibration is successful then you are immediately redirected to the *review calibration* page.

Calibration will fail if the computed vertical or horizontal pixel displacement exceeds the allowed range of $[-31, +31]$ for any image point. The most likely causes for a failed calibration are:

- Insufficient number of calibration frames.
- Improperly aligned cameras. See Section 6.3.
- Lenses with strong geometric distortions.
- Lenses with unequal focal lengths.
- Not synchronized cameras.
- Frames with misdetected calibration board.

Should calibration fail, then please resolve the cause of error and repeat the calibration process. If the cause of error is one or more erroneous calibration frames, then you can delete those frame and re-press the *calibrate* button. Likewise, in case of too few calibration frames, you can record additional frames and restart the calibration process.

8.7 Reviewing Calibration Results

Once calibration has been performed you can inspect the calibration results on the *review calibration* page. On the top of this page you see a live preview

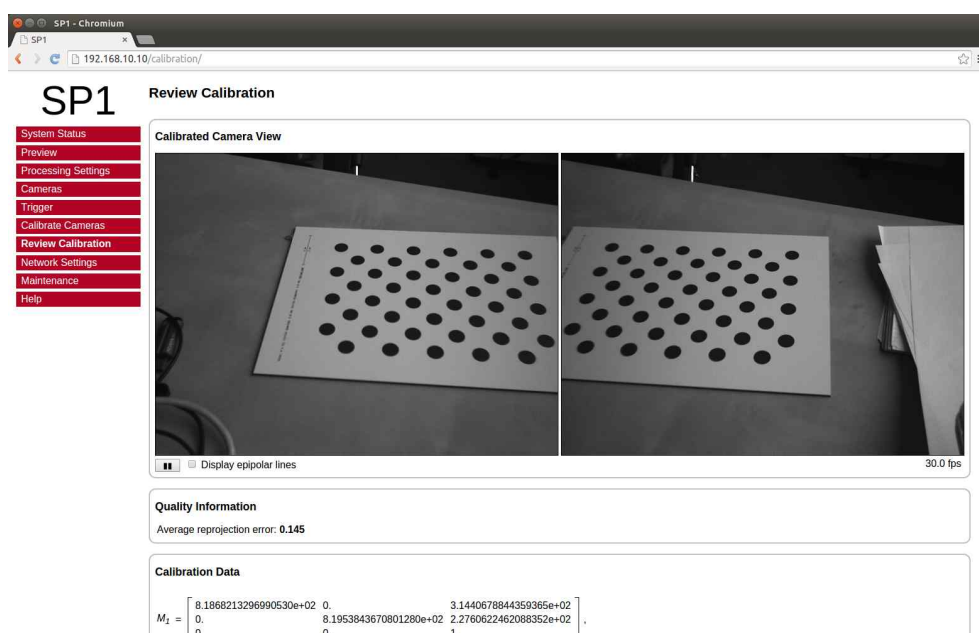


Figure 18: Screenshot of configuration page for reviewing camera calibration.



Figure 19: Example for evaluating vertical image coordinates.

of both cameras, which have been rectified with the current calibration parameters. Please make sure that corresponding points in the images of both cameras have an identical vertical coordinate.

By activating the *display epipolar lines* option, you can overlay a set of horizontal lines on both camera images. This allows for an easy evaluation of whether the equal vertical coordinates criterion is met. An example for a left and right input image with overlaid epipolar lines is shown in Figure 19.

In the *quality information* section you can find the *average reprojection error*. This is a measure for the quality of your camera calibration, with lower values indicating a better calibration result. Please make sure that the average reprojection error is well below 1 pixel.

All computed calibration parameters are displayed in the *calibration data*

section. These parameters are:

M₁ and M₂: camera matrices for the left and right camera.

D₁ and D₂: distortion coefficients for the left and right camera.

R₁ and R₂: rotation matrix for the rotation between the original and rectified camera images.

P₁ and P₂: projection matrices in the new (rectified) coordinate systems.

Q: the disparity-to-depth mapping matrix. See Section 7.2 for its use.

T: translation vector between the coordinate systems of both cameras.

R: rotation matrix between the coordinate systems of the left and right camera.

The camera matrices M_1 and M_2 are structured as follows:

$$M_i = \begin{bmatrix} f_x & 0 & c_x \\ 0 & f_y & c_y \\ 0 & 0 & 1 \end{bmatrix}, \quad (1)$$

where f_x and f_y are the lenses' focal lengths in horizontal and vertical direction (measured in pixels), and c_x and c_y are the image coordinates of the projection center.

The distortion coefficient vectors D_1 and D_2 have the following structure:

$$D_i = [k_1 \quad k_2 \quad p_1 \quad p_2 \quad k_3], \quad (2)$$

where k_1 , k_2 and k_3 are radial distortion coefficients, and p_1 and p_2 are tangential distortion coefficients.

You can download all calibration information as a machine-readable YAML file, by clicking the download link at the bottom of the *calibration data* section. This allows you to easily import the calibration data into your own applications. Furthermore, you can save the calibration data to your PC and reload it at a later point, by using the *upload calibration data* section. This allows you to switch between different cameras or optics without repeating the calibration process.

You can also perform a reset of the calibration data by pressing the *reset calibration* button. In this case, image rectification will be disabled, and the unmodified image data will be passed on to the stereo matching algorithm. Use this option when selecting the already rectified virtual example camera, as explained in Section 8.4.

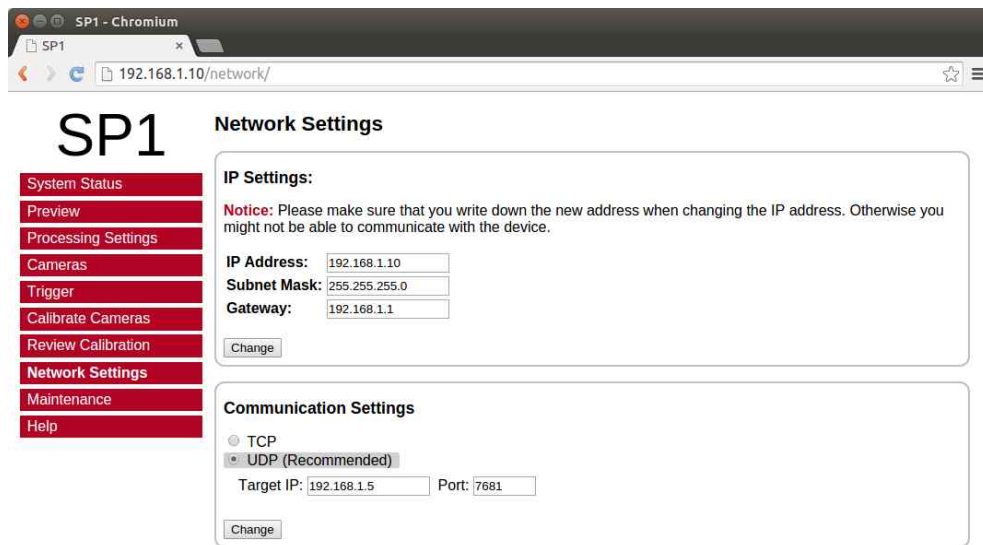


Figure 20: Screenshot of configuration page for network settings.

8.8 Network Settings

The *network settings* page, which is displayed in Figure 20, is used for configuring all network related parameters. In the *IP settings* section, you can specify an IP address, subnet mask and gateway address. When changing the IP settings, please make sure that your computer is in the same subnet, or that there exists a gateway router through which data can be transferred between both subnets. Otherwise you will not be able to access the SP1.

In the *communication settings* section, you can choose the underlying network protocol that shall be used for delivering the computation results to the client computer. The possible options are *TCP* and *UDP*. Due to the high-bandwidth real time data, we recommend using *UDP*.

If *TCP* is selected, the SP1 will open up the server port 7681 and wait for a client computer to connect before transmitting data. Because *UDP* is a connection-less protocol, data transmission starts instantly if *UDP* is selected. In *UDP* mode you thus have to specify the IP address and port number of the client computer. It is possible to enter a multicast address here, if you want the data to be received by multiple hosts or processes.

8.9 Maintenance

The *maintenance* page, which is shown in Figure 21, allows you to trigger a reboot of the SP1. This can be done by pressing the *reboot now* button. Perform this step if the SP1 has stopped functioning correctly. When a reboot is triggered it will take several seconds before the device will be reachable again.

The maintenance page further allows you to perform firmware updates. Use

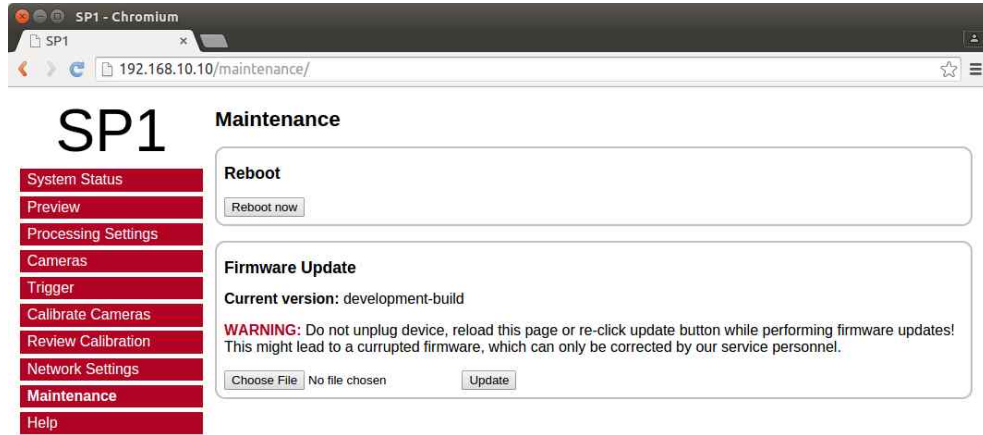


Figure 21: Screenshot of configuration maintenance page.

this functionality only for firmware files that have officially been released by Nerian Vision Technologies. To perform a firmware update, select the desired firmware file and press the *update* button. The update process will take several seconds. Do not unplug the device, reload the maintenance page or re-click the update button while performing firmware updates. Otherwise, this might lead to a corrupted firmware.

9 API Usage Information

9.1 General Information

The cross-platform *libvisiontransfer* C++ API is available for interfacing custom software with the SP1. For windows, a binary version of the library is available that can be used with Microsoft Visual Studio 2013 and 2015. For Linux and Mac OSX, please compile the library from the available source code package. The API can be downloaded from the product website².

The *libvisiontransfer* API provides functionality for receiving the processing results of the SP1 over a computer network. Furthermore, the API also allows for the transmission of image data. It can thus be used for emulating an SP1 when performing systems development.

The transmitted processing results always consist of two images. Usually these are the rectified left camera image and the computed left camera disparity map. If configured, however, the SP1 can also provide the raw camera images or the rectified images of both cameras (see Section 8.4).

The first transmitted image always has a bit-depth of 8 bits and the second image has a bit depth of 12 bits. Inside the library, the second image is inflated to 16 bits to allow for more efficient processing.

²<http://nerian.com/products/sp1-stereo-vision/>

The API provides three classes that can be used for receiving and transmitting image data:

- **ImageProtocol** is the most low-level interface. This class allows for the encoding and decoding of images to / from network messages. You will have to handle all network communication yourself.
- **ImageTransfer** opens up a network socket for sending and receiving network messages. This class is single-threaded and will thus block when receiving or transmitting data.
- **AsyncTransfer** allows for the asynchronous reception or transmission of network messages. This class creates one or more threads that handle all network communication.

Detailed information on the usage of each class can be found in the available API documentation.

9.2 ImageTransfer Example

An example for using the class **ImageTransfer** to receive processing results over the network, and writing them to image files is shown below. This source code file is part of the API source code package. Please refer to the API documentation for further information on using **ImageTransfer**.

```
#include <visiontransfer/imagetransfer.h>
#include <iostream>
#include <fstream>
#include <stdio.h>

#ifdef _WIN32
#include <winsock2.h>
#else
#include <arpa/inet.h>
#endif

#ifdef _MSC_VER
// Visual studio does not come with snprintf
#define snprintf _snprintf_s
#endif

int main() {
    // Create an image transfer object that receives data from
    // the SP1 on the default port using UDP
    ImageTransfer imageTransfer(ImageTransfer::UDP_CLIENT, NULL,
                               "7681");

    // Receive 100 images
    for(int i=0; i<100; i++) {
```

```

std::cout << "Receiving_image_" << i << std::endl;

// Alternatingly receive the first and second image
for(int imageNumber = 0; imageNumber <=1; imageNumber++) {
    // Receive image
    int width, height, rowStride;
    ImageProtocol::ImageFormat format;
    unsigned char* pixelData = NULL;
    while(pixelData == NULL) {
        pixelData = imageTransfer.receiveImage(imageNumber,
            width, height, rowStride, format);
    }

    // Create PGM file
    char fileName[100];
    snprintf(fileName, sizeof(fileName), "image%03d_%d.pgm", i,
        imageNumber);
    std::fstream strm(fileName, std::ios::out);

    // Write PGM header
    int maxVal, bytesPixel;
    if(format == ImageProtocol::FORMAT_8_BIT) {
        maxVal = 255;
        bytesPixel = 1;
    } else { // 12 bit
        maxVal = 4095;
        bytesPixel = 2;
    }

    strm << "P5_" << width << "_" << height << "_" << maxVal
        << std::endl;

    // Write image data
    for(int y = 0; y < height; y++) {
        for(int x = 0; x < width; x++) {
            unsigned char* pixel = &pixelData[
                y*rowStride + x*bytesPixel];
            if(bytesPixel == 2) {
                // Swap endianness
                *reinterpret_cast<unsigned short*>(pixel)
                    = htons(*reinterpret_cast<unsigned short*>(pixel));
            }
            strm.write(reinterpret_cast<char*>(pixel), bytesPixel);
        }
    }
}

return 0;
}

```

9.3 AsyncTransfer Example

An example for using the class `AsyncTransfer` to receive processing results over the network, and writing them to image files is shown below. This source code file is part of the API source code package. Please refer to the API documentation for further information on using `AsyncTransfer`.

```
#include <visiontransfer/asynctransfer.h>
#include <iostream>
#include <fstream>
#include <stdio.h>

#ifdef _WIN32
#include <winsock2.h>
#else
#include <arpa/inet.h>
#endif

#ifdef _MSC_VER
// Visual studio does not come with snprintf
#define snprintf _snprintf_s
#endif

int main() {
    // Create an async transfer object that receives data from
    // the SP1 on the default port using UDP
    AsyncTransfer asyncTransfer(ImageTransfer::UDP_CLIENT, NULL,
        "7681");

    // Receive 100 images
    for(int i=0; i<100; i++) {
        std::cout << "Receiving_image_" << i << std::endl;

        // Alternatingly receive the first and second image
        for(int imageNumber = 0; imageNumber <=1; imageNumber++) {
            int width, height, rowStride;
            ImageProtocol::ImageFormat format;
            unsigned char* pixelData = NULL;

            // Keep on trying to receive an image until successful
            while(pixelData == NULL) {
                pixelData = asyncTransfer.collectReceivedImage(
                    imageNumber, width, height, rowStride, format,
                    0.1 /*timeout*/);
            }

            // Create PGM file
            char fileName[100];
            snprintf(fileName, sizeof(fileName), "image%03d_%d.pgm", i,
                imageNumber);
            std::fstream strm(fileName, std::ios::out);
```

```

// Write PGM header
int maxVal, bytesPixel;
if(format == ImageProtocol::FORMAT_8_BIT) {
    maxVal = 255;
    bytesPixel = 1;
} else { // 12 bit
    maxVal = 4095;
    bytesPixel = 2;
}

strm << "P5_" << width << "_" << height << "_" << maxVal
    << std::endl;

// Write image data
for(int y = 0; y < height; y++) {
    for(int x = 0; x < width; x++) {
        unsigned char* pixel = &pixelData[
            y*rowStride + x*bytesPixel];
        if(bytesPixel == 2) {
            // Swap endianness
            *reinterpret_cast<unsigned short*>(pixel)
                = htons(*reinterpret_cast<unsigned short*>(pixel));
        }
        strm.write(reinterpret_cast<char*>(pixel), bytesPixel);
    }
}
}

return 0;
}

```

9.4 3D Reconstruction

As described in Section 7.2, the disparity map can be transformed into a set of 3D points. This requires knowledge of the disparity-to-depth mapping matrix Q , which can be obtained from the review calibration page of the web interface (see Section 8.7).

An optimized implementation of the required transformation, which uses SSE or AVX instructions, is provided by the API through the class `Reconstruct3D`. This class converts a disparity map to a map of 3D point coordinates. Please see the API documentation for details on using this class.

10 SpCom Sample Application

The downloadable source code or binary version of the libvisiontransfer API also include the SpCom sample application, which is shown in Figure 22. When compiling this application yourself, please make sure that you have the libraries OpenCV and libSDL installed.

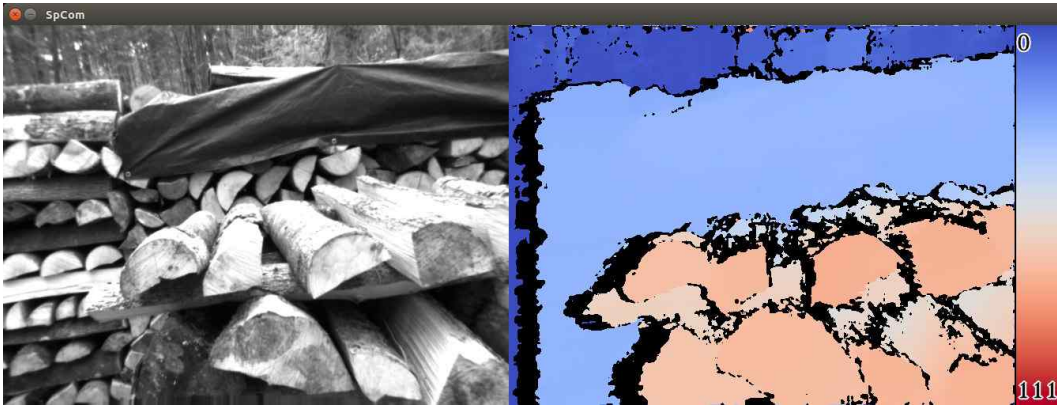


Figure 22: Screenshot of SpCom sample application.

SpCom provides the following features:

- Receive and display images and disparity maps from SP1.
- Perform color-coding of disparity maps.
- Write received data to image files.
- Transmit a set of images over the network and thus emulate the SP1.

SpCom should be run from a terminal in order to supply command line arguments and to view the printed status messages. If the graphical mode is not disabled, then SpCom opens up a window for displaying the received images. The currently displayed images can be written to files by pressing the *space* key. When pressing the *enter* key, all received images are written to files up until *enter* is re-pressed. The created image files will be located in the current working directory.

SpCom can be controlled with the following command line options:

-c	Color code the disparity map.
-s <i>directory</i>	Server mode (emulating SP1). The images in the given directory will be read and sent out over the network.
-n	Non-graphical mode. No display window will be opened.
-f <i>number</i>	Limits the frame rate to the given value. This option can be used in server mode for controlling the replay speed.
-w <i>directory</i>	Immediately start writing all received images to the given directory.
-h <i>hostname</i>	Use the given hostname for communication. This option should be specified when connecting to the SP1 through TCP, or when operating in server mode while using the UDP protocol.
-p <i>port</i>	Use the given port number for communication. The default port number is 7681.
-t	Use TCP instead of UDP as the underlying network protocol.
-r	Output the right image (usually the disparity map) as raw 12-bit image without bit-depth conversion.
-i <i>0/1</i>	Only display image 0 (left) or 1 (right).

11 Support

If you require support or if you have other inquiries that are related to this product, please contact:

Dr. Konstantin Schauwecker
Nerian Vision Technologies
Gotenstr. 9
70771 Leinfelden-Echterdingen
Germany

Phone: +49-1577-1956789
E-mail: service@nerian.com

Website: <http://nerian.com>

12 Warranty Information

The device is provided with a 2 year warranty according to German federal law (BGB). Warranty is lost if:

- the housing is opened by others than official Nerian Vision Technologies service staff.
- the firmware is modified or replaced, except for official firmware updates.

In case of warranty please contact our support staff.

13 Open Source Information

The firmware of the SP1 contains code from the open source libraries and applications listed in Table 1. Source code for these software components and the wording of the respective software licenses can be obtained from the open source information website³. Some of these components may contain code from other open source projects, which have not been listed here. For a definitive list, please consult the respective source packages.

Table 1: Open source components.

Name	Version	License(s)
busybox	1.22.1	GNU GPL 2.0
dropbear	2014.63	MIT License BSD License OpenSSH License
glib	2.40	GNU LGPL 2.0
libdc1394	2.2.3 (patched)	GNU LGPL 2.1
libffi	3.1	MIT
libusb	1.0.18	GNU LGPL 2.1
libwebsockets	1.3	GNU LGPL 2.1
libxml2	2.9.1	MIT License
linux	3.18.0-xilinx	GNU GPL 2.0
monit	5.13	GNU GPL 3.0
opencv	2.4.9	BSD License libpng License JasPer License 2.0
openssl	1.0.2c	OpenSSL License
PHP	5.5.16	PHP License
Sourcery CodeBench Lite for Xilinx Cortex-A9 GNU/Linux	2014.11-30	GNU GPL 2.0 GNU GPL 3.0 Mentor Graphics License BSD / Various
u-boot	xilinx-v2015.2	GNU GPL 2.0
zlib	1.2.8	Zlib License

The following individuals have requested to be named as author or co-author of one of the included open source projects:

The PHP Group, Google Inc., The Android Open Source Project, Red Hat Incorporated, University of California, Berkeley, David M. Gay, Christopher G. Demetriou, Royal Institute of Technology, Alexey Zelkin, Andrey A. Chernov, FreeBSD, S.L. Moshier, Citrus Project, Todd C. Miller, DJ Delorie, Intel Corporation, Henry Spencer, Mike Barcroft, Konstantin

³<http://nerian.com/products/sp1-stereo-vision/open-source/>

Chuguev, Artem Bityuckiy, IBM, Sony, Toshiba, Alex Tatmanjants, M. Warner Losh, Andrey A. Chernov, Daniel Eischen, Jon Beniston, ARM Ltd, CodeSourcery Inc, MIPS Technologies Inc, Addison-Wesley, Advanced Micro Devices Inc., Alexander Chemeris, Alexander Neundorf, Alexandre Benoit, Alexandre Julliard, Andreas Dilger, Andrei Alexandrescu, Andrey Kamaev, Annecy le Vieux and GIPSA Lab, Argus Corp, Arren Glover, AWARE Systems, Baptiste Coudurier, Chih-Chung Chang, Chih-Jen Lin, Christopher Diggins, Clement Boesch, David G. Lowe, Edward Rosten, Enrico Scholz, EPFL Signal processing laboratory 2, Ethan Rublee, ETH Zurich Autonomous Systems Lab (ASL), Fabrice Bellard, Farhad Dadgostar, Frank D. Cringle, Glenn Randers-Pehrson, Google Inc., Greg Ward Larson, Group 42 Inc., Guy Eric Schalnat, Image Power Inc., Industrial Light & Magic, Institute Of Software Chinese Academy Of Science, Intel Corporation, Ivan Kalvachev, James Almer, Javier Sánchez Pérez, Jean-loup Gailly, Joris Van Damme Joseph O'Rourke, Jostein Austvik Jacobsen, Justin Ruggles, Ken Turkowski, Kevlin Henney, GIPSA French Labs, LISTIC Lab, Liu Liu, Maarten Lankhorst, Makoto Matsumoto, Mans Rullgard, Marius Muja, Mark Adler, Martin Storsjö, Michael David Adams, Michael Niedermayer, Microsoft Corporation, Multicoreware Inc., Nicolas George, Nils Hasler, NVIDIA Corporation, OpenCV Foundation, Pablo Aguilar, Peter Ross, PhaseSpace Inc., Philipp Wagner, Pixar Animation Studios, Reimar Döffinger, Rob Hess, Ryan Martell, Sam Leffler, Samuel Pitoiset, Silicon Graphics Inc., Simon Perreault, Smartjog S.A.S, Splitted-Desktop Systems, Takuji Nishimura, The Khronos Group Inc., The Regents of the University of California, the Sphinx team, The University of British Columbia, the Wine project, Thomas G. Lane, University of Augsburg, Weta Digital Ltd, William Lucas, Willow Garage Inc., Xavier Delacour, Yossi Rubner

If you believe that your name should be included in this list, then please let us know.

Revision History

Revision	Date	Author(s)	Description
v1.1	September 21, 2015	KS	Speckle filter, corrections to open source information.
v1.0	August 28, 2015	KS	List of compatible cameras, information on IDS cameras, software download link, extended open source information, general improvements.
v0.1	July 30, 2015	KS	Initial revision

Gefördert durch:



aufgrund eines Beschlusses
des Deutschen Bundestages

